


## Barcode Scanner Product Overview

To turn on the device, locate the red power button in the bottom right corner of the keyboard. This button can also be pressed to resume use if the device goes into sleep mode.



Above the yellow button on the right side of the device you will find the charging port.

Above the yellow button on the left side of the device you will find volume buttons.

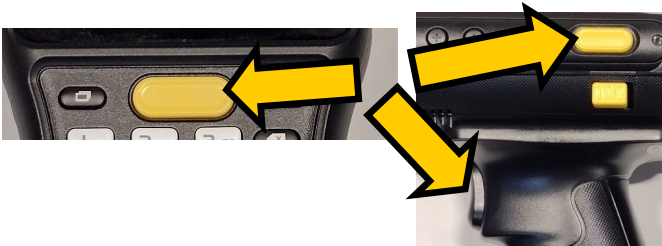

There are multiple buttons that can be pushed to scan a barcode: the trigger on the pistol attachment, the yellow button just below the screen, and the yellow buttons on either side of the device.

When scanning a barcode, be sure the device cursor is in the appropriate text field. Press the trigger or a scan button. Line up the scanner squarely on the barcode and release the trigger or button to scan. The device must be held at least six inches away from the barcode you are scanning and can scan a barcode from up to two feet away.



Below the back button is a backspace button that can be used in the PFA Barcode application.

NOTE: The blue button located beneath the enter button, turns on the FN features listed on the number pad. If you find that the number pad can enter zero, but no other numbers, this button may have been pressed. Check to see if FN is showing on the top bar of the device screen. If so, press the blue button to turn it off and your number pad should work normally again.

